


ARTISTICA®

HOME

ASSEMBLY INSTRUCTIONS

2005-877C Axiom Rectangular Dining Table

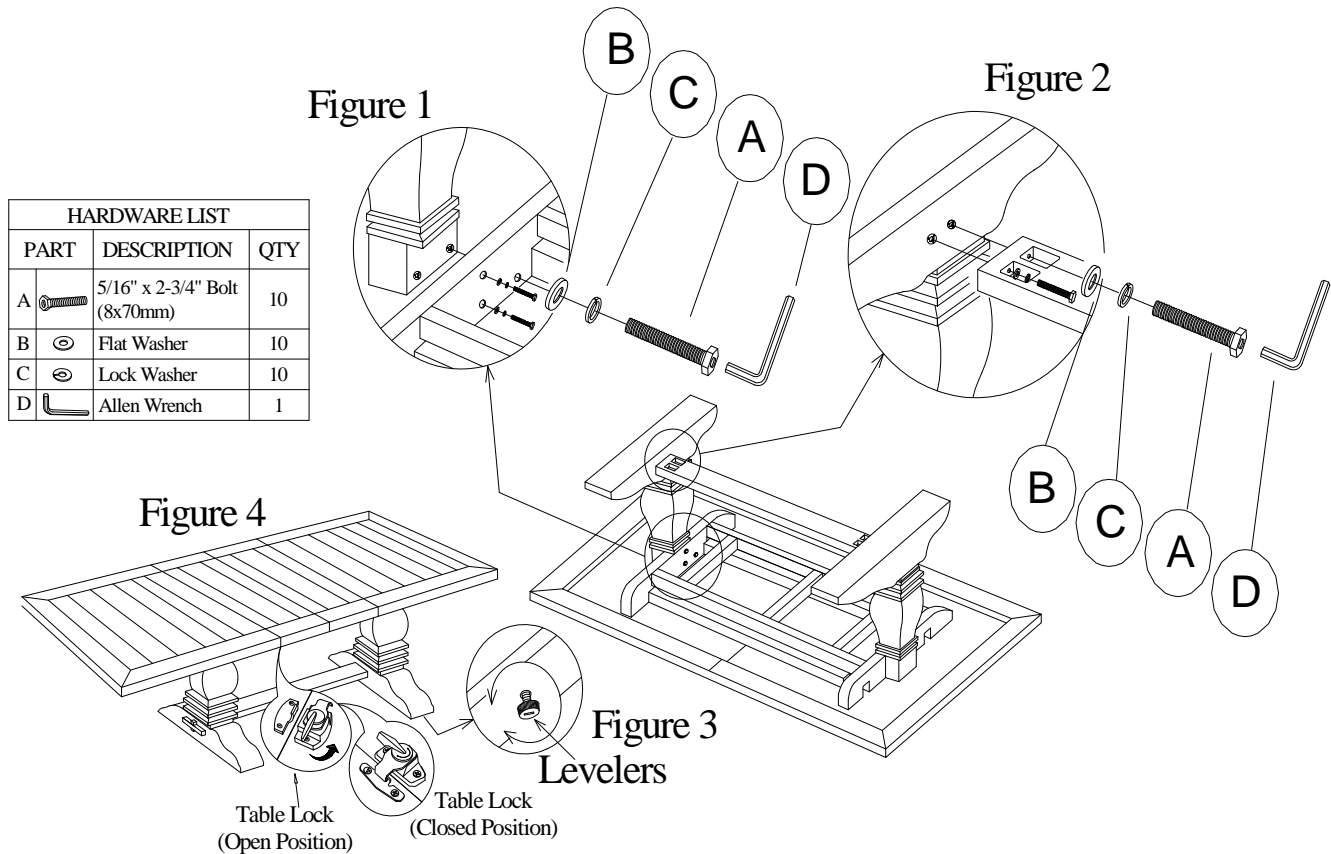

HARDWARE LIST		
PART	DESCRIPTION	QTY
A	5/16" x 2-3/4" Bolt (8x70mm)	10
B	Flat Washer	10
C	Lock Washer	10
D	Allen Wrench	1

To Assemble Table:

1. Place table top upside-down on flat, clean, non-marring surface.
2. Insert one leg pedestal so that holes in pedestal align with holes on top apron.
3. Use Allen Wrench (D) to attach pedestal to top with (3) of each: Flat Washers (B), Lock Washers (C), and Bolts (A). Hand-tighten bolts. (Figure 1)
4. Repeat steps 2-3 for other pedestal.
5. Position stretcher so that holes on stretcher align with holes on inside of both pedestals. (Bottom of stretcher with access slots should be facing upward.)
6. Use Allen Wrench (D) to attach stretcher to both pedestals with (4) of each: Flat Washer (B), Lock Washers (C), and Bolts (A). Hand-tighten bolts. (Figure 2)
7. Fully tighten all bolts from all steps.
8. Return assembled table to its upright position and place in desired location.
9. There are Adjustable Levelers on the bottom of each pedestal. For uneven flooring, rotate leveler clockwise to raise and counter-clockwise to lower. (Figure 3)

To Attach Leaf:

1. Open table locks on underside of table, located between half-tops on each side. (Figure 4)
2. Pull on one end of table to separate half-tops. Open table enough to insert leaf.
3. Place table leaf between half-tops so that pins on leaves align with holes on half-tops.
4. Push table on each end until fully closed.
5. Close table locks on underside of table between each leaf and half-top.

For additional consumer assistance, please contact your local Artistica Home dealer or our Customer Services Department at 1-336-474-5300, Monday-Friday, 8-5 Eastern.